



Corner Windows

Butt & Thru

When two blinds butt against each other on a corner window, as shown in the diagrams below, one blind is known as the **"butt"** and the other the **"thru"** blind.

Measure the thru blind at the top of the window flush to the corner where it will sit & note down the exact measurement. Do exactly the same for the butt blind and note down the exact measurement; our factory will take the necessary deductions depending on what product you are purchasing. (See table below for your reference)

Note: Due to the nature on different products there will always be a gap where the two blinds meet in the corner. This cannot be avoided but we have ensured that maximum privacy & minimum light gaps be achieved.

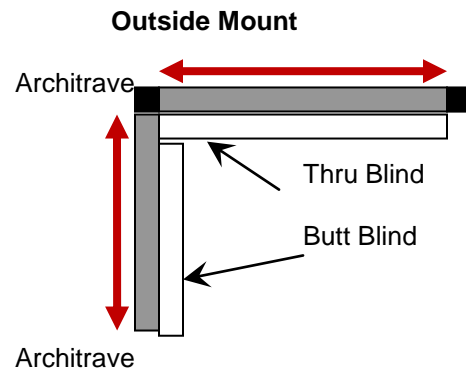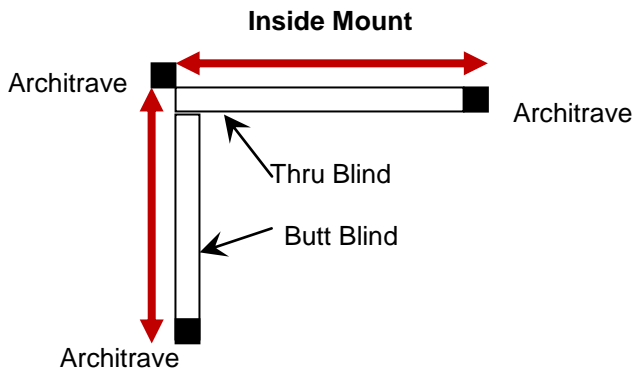

FYI – Factory deductions are as below
Butt Blind – Corner Window Deduction for Headrail Width

Product	Timber Venetians	16mm or 25mm Venetian	50mm Venetian	Roller / Screen	Vertical	Roman
Width	75mm	30mm	70mm	75mm	95mm	55mm