

Measuring Guide

Roman Blinds

For accurate measurements please use a metal tape measure, and take measurements in millimeters.

Choose whether you want the blinds to hang inside the recess or outside the window frame.

Please check the position of adjacent walls, furniture and window handles etc. when measuring for your blinds.

Recess Fit – Inside Mount


Not recommended as windows may not be square.

Face Fit – Outside Mount

Outside mounts are fitted to the architrave. This will make windows appear bigger and are used to hide unattractive architraves.

1. Measure the blind width of where you'd like your blind to be. Note down the measurement.
2. Measure the blind drop: From the top of where you want your blind to be to the bottom.
3. Note down the measurement.

To ensure minimum light gaps and maximum privacy, we recommend that your blind overlaps the bottom and both sides of the recess by at least 50 mm.

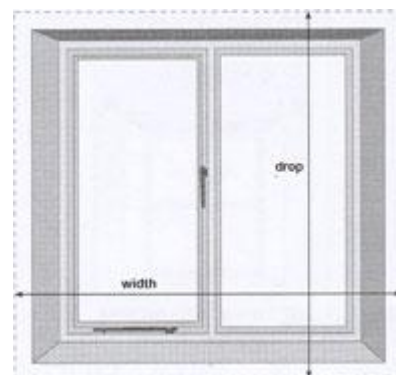

Full Length (To Floor)

To accommodate the fabric settling in the drop the below allowances **“WILL be made by the factory”**

DROP SIZE – up to 1700mm

Deduct 10mm

DROP SIZE – 1701mm – 2400mm

Deduct 20mm

DROP SIZE – 2401mm – upwards

Deduct 30mm

Installation Guide

Roman Blinds