

Measuring Guide

Wooden Venetian Blinds

For accurate measurements please use a metal tape measure, and take measurements in millimeters.

Choose whether you want the blinds to hang inside the recess or outside the window frame.

Please check the position of adjacent walls, furniture and window handles etc. when measuring for your blinds.


Recess Fit – Inside Mount

This is when you want your blind to fit inside the window recess. This creates a finished look.

If you intend to hang your blinds within the window recess (sometimes called the reveal), you should measure the "recess size" which is the exact width and drop of the window recess.

1. Measure the width of the recess from wall to wall in 3 places.
2. Note down the shortest measurement.
3. Measure the drop from the top of the recess to the window sill in 3 places.
4. Note down the shortest measurement - this is the one you should use.

Note: Standard factory allowances will be made. FYI - Width – 5mm deduction & Drop – 10mm deduction.

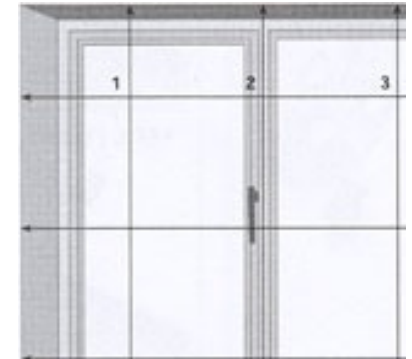


Face Fit – Outside Mount

Outside mounts are fitted to the architrave. This will make windows appear bigger and are used to hide unattractive architraves.

1. Measure the blind width of where you'd like your blind to be. Note down the measurement.
2. Measure the blind drop: From the top of where you want your blind to be to the bottom.
3. Note down the measurement.

If your window doesn't have architraves it is recommended you add between 75mm to 100mm on each side of the window to minimize light.

Note: No allowances will be made; the blind will be made to exact sizes supplied.

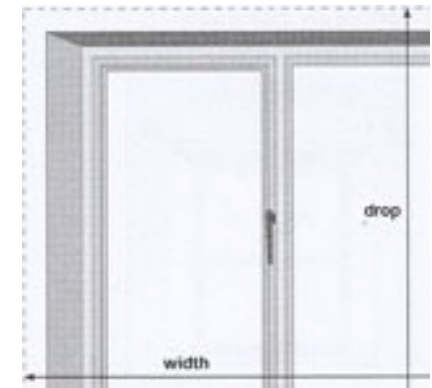

Installation Guide

Wooden Venetian Blinds